



Samsung Portable Dualband Tri-Mode Antenna Replacement

This guide walks users through the process of removing the antenna from the Samsung Portable Dualband Tri-Mode phone.

Written By: Kali Kupp



INTRODUCTION

If the phone is regularly losing signal, one possibility is that the antennae is no longer functional and needs to be replaced. The antennae is also fragile and can gather dirt, which may cause it to break. This guide addresses both of these problems.



TOOLS:

- [Tweezers](#) (1)
-

Step 1 — Battery



- Slide the battery out from the battery compartment on the back of the phone.

Step 2 — Antenna



- Unscrew the antenna top.

Step 3



- Clasp the antenna with tweezers and push toward the top.
- Remove the antenna.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-18 09:36:31 PM.